



## Installation of exterior WOODTOUCH flooring with adhesive on wooden/metal slats.


We have worked closely with our adhesive manufacturer to ensure a rigorous fixing procedure that is perfectly matched to gluing WoodTouch strips.

As we are constantly evolving both the design of the adhesives and the method for installation. We therefore recommend you ask the Bikssen Technical Department about our most recent applications.

### Installation:

The strips are supplied in widths of 148 mm, 198 mm and 300 mm. Total length is 2440 mm.

\* For widths greater than 300 mm, contact the Bikssen Technical Department.

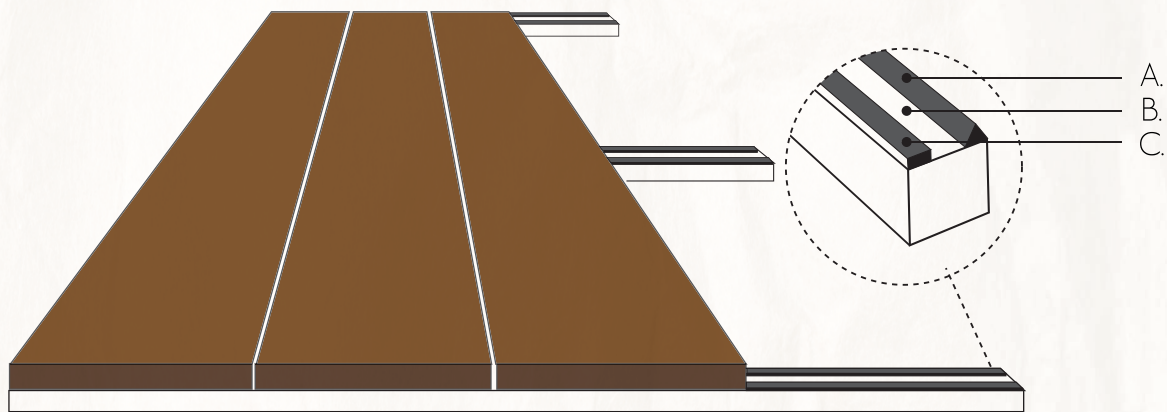

- A. Transparent elastic adhesive
- B. Priming
- C. Double-sided adhesive tape

### Substructure:

The slats should be installed perpendicular to the strips, which must be protected as much as possible from corrosion and rot, regardless of the material or system used.

Maximum distance between slats:

Thickness (mm)	Distance between slats (mm)
10,12	300
14	400

### Mounting clips:

It is essential that once you have installed the WoodTouch strips, and until the adhesive polymerizes, you place fixing clips along the perimeter of the parts (every 200-300 mm, taking extra care to support the corners). We recommend the clips apply no more pressure than the thickness of the double-sided tape.

